

PARTS LIST

RR - RODENT RIDDER

<u>PART #</u>	<u>DESCRIPTION</u>	<u>WEIGHT</u>
PRRSP	REPLACEMENT SHANK POINT	-
PRRRP	ROLL PIN - 5/16 X 2 3/8 (FOR POINT)	-
PRRFT	RR - FOOT & PT ONLY	-
PRRS	SHANK WITH FT & PT	-
PRRUB	RR - WEAR BAR FOR SHANK	-
PRRDT	DROP TUBE 1 X 2W 3/4 X 3 BOLT, LOCK WASHER & NUT	-
PRRJS	SQ. TUBE JACK STAND	-
PRRCA	COULTER ASSEMBLY WITH HUB & SHANK	-
PRRC	20" COULTER	-
PRRCAB	COULTER DROP BAR	-
PRRHA	HUB ASSEMBLY	-
PRRFB	FLANGE BEARING FOR DRIVE WHEEL	-
PRRBSK	RR BEARING & SEAL KIT	-
PRRGC	COULTER GREASE CAP	-
PRRH	HOPPER ONLY	

PRRL	HOPPER LID	-
PRRW	WING NUT FOR LID	
PRRM	METER	-
PRRMC	METER COLLAR	
PRRW	DRIVE WHEEL ONLY	-
PRRWY	WHEEL YOKE	
PRRDS	DRIVE SPROCKET	
PRRDSK	KEY FOR DRIVE SPROCKET	
PRRIS	IDLER SPROCKET	
PRRISH	HARDWARE FOR IDLER SPROCKET (NUT, BOLT 6-WASHER)	
PRRRC	#40 X 52" ROLLER CHAIN	